


1. Starting up

Computer and Screen needs to handle 1920x1080 resolution


We recommend that all other programmes are shut down during the installation procedure.

- Insert the CD/memory stick into the computer.
- Click on Open folder and show the files.
- Double click the VICASS HD Analyze Installer-folder to open it.
- Double click the VICASS HD Installer-folder and double click the Volume-folder.
- Double click the setup.exe-file to start up the installation.


2. Check that the location is ok, and click Next.

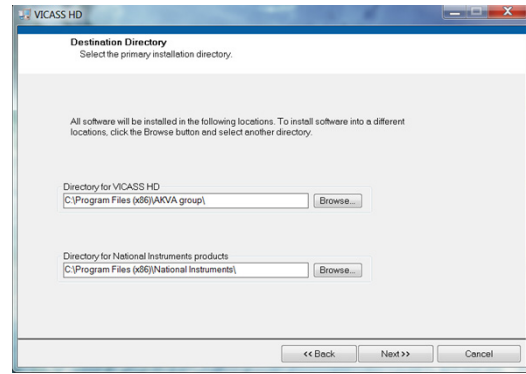


3. Choose 'I accept..' and click 'Next'.

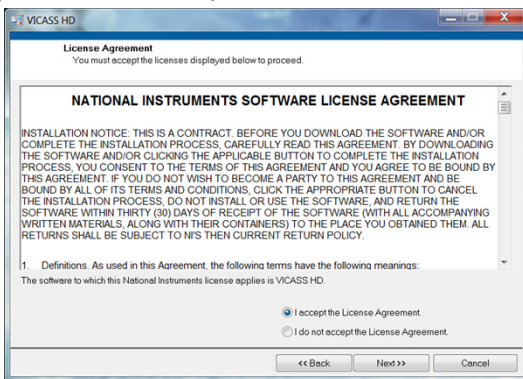


4. Click 'Next' to start up the installation.

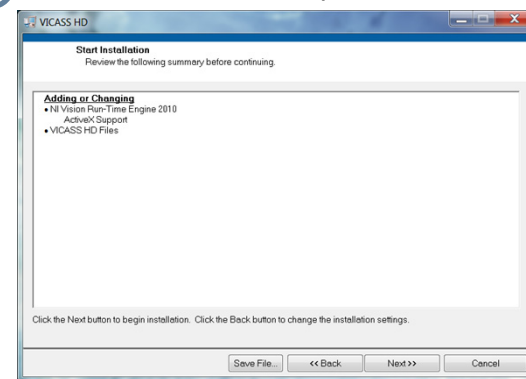


5. Enter the serial number (starts with M77X..)

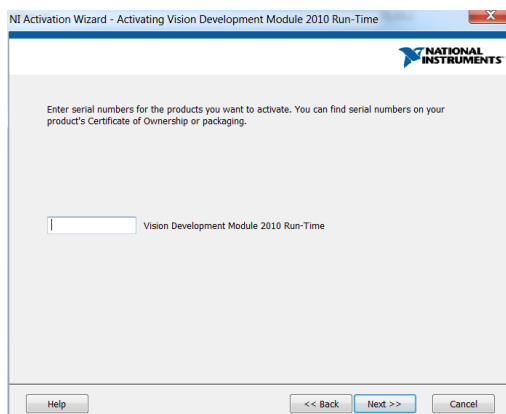


6. Wait until the installation is completed.

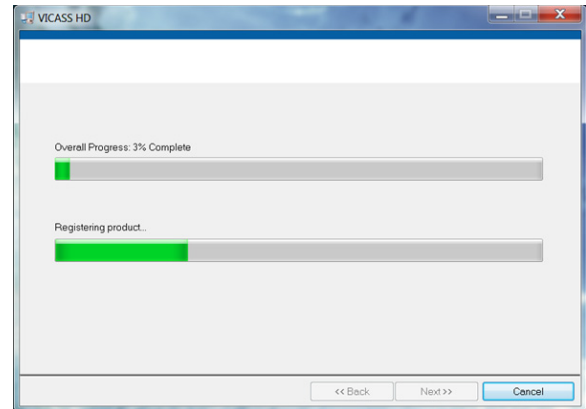


7. Click 'Next'.

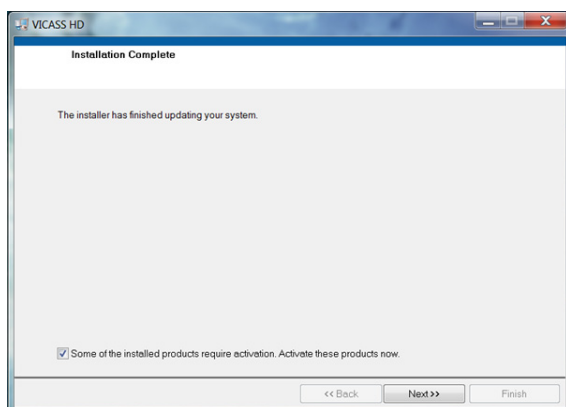


8. Choose Automatically activation.. and click 'Next'.

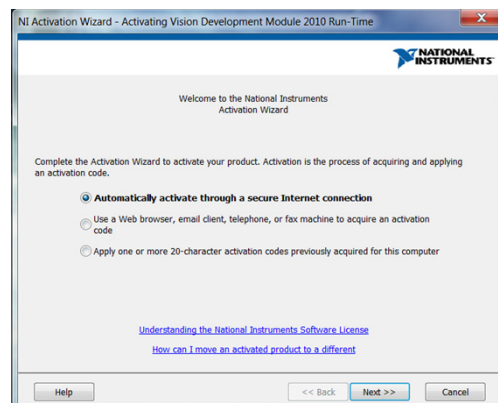


9. Choose 'Continue without registering' and click Next.

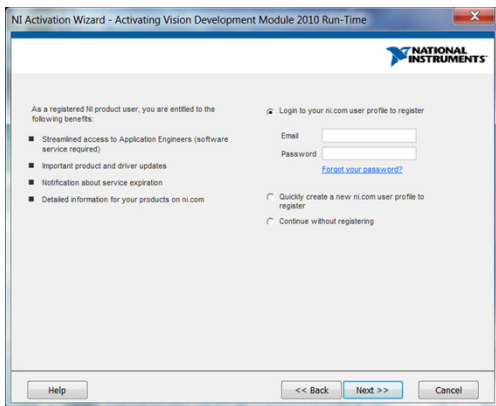


10. Fill in name and organisation and click 'Next'.

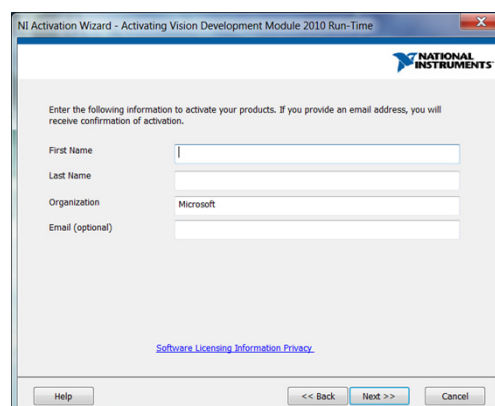


11. Click 'Finish'.

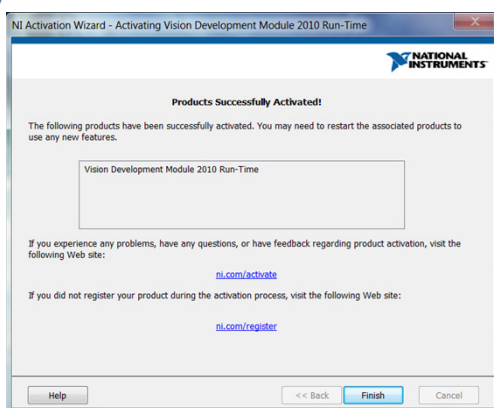

12. Click Restart to restart the computer to complete the installation.

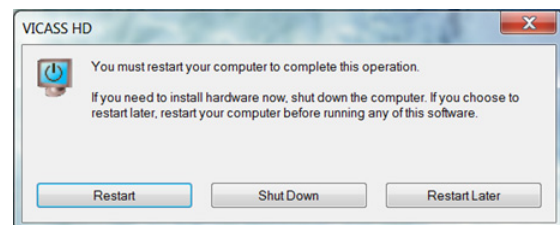

13. This window opens when the program is started up after restarting. Click. Click 'Cancel'.

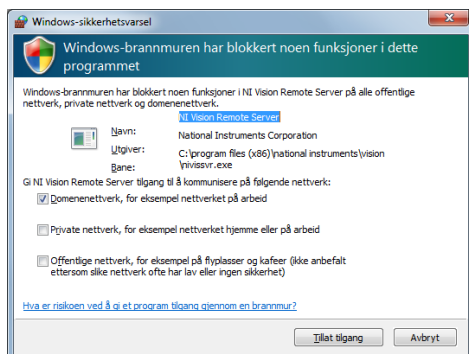

If you experience any problems with the installation, do not hesitate to contact us!

AKVA group ASA - Bryne Head Office, Norway
tel. + 47 - 51 77 85 00 fax. + 47 - 51 77 85 01

Support: tel. + 47 - 51 77 85 03

supportakvasmart@akvagroup.com

IMPORTANT!



Before using the program, make sure to have correct decimal symbol registered.

- To control or to change decimal symbol:

 1. Control panel (from the Start menu)
 2. Choose Region and language
 3. Change keyboard or other input methods
 4. Customize format
 5. Adjustments
 5. Numbers
 6. Change Decimal symbol from "." to ","
 7. Apply -> OK

